
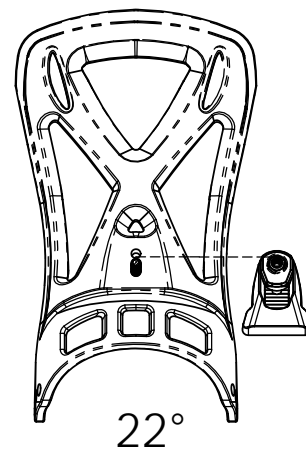
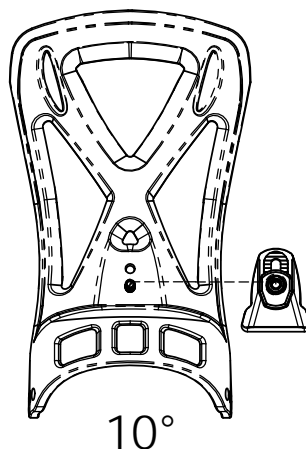


## Ride-Stride Highback Install

**Important:** Installation of Ride-Stride Highback on '10-'11 and '11-'12 Split30 bindings requires drilling new mounting holes. Use the template below to position new holes. Drilling should only be performed by someone competent with the use of power tools.

### Forward Lean Adjustment

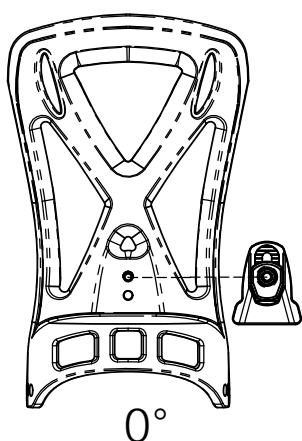


1. Cut out templates below
2. Align templates to the outer edge of heelcup and the existing highback holes (back light heel cup to make sure existing mounting holes are aligned to template)
3. Tape templates in place
4. Mark center of new holes with center punch, center drill or nail
5. Drill new hole using a 17/64 or 6.8mm Drill bit
6. Mount Highback, take care not to strip phillips head of t-nut
7. Enjoy

Contact us at [bryce@karakorambc.com](mailto:bryce@karakorambc.com) or [tyler@karakorambc.com](mailto:tyler@karakorambc.com) if you have any questions.

### LEFT TEMPLATE

6.8mm  
or  
17/64 Drill bit

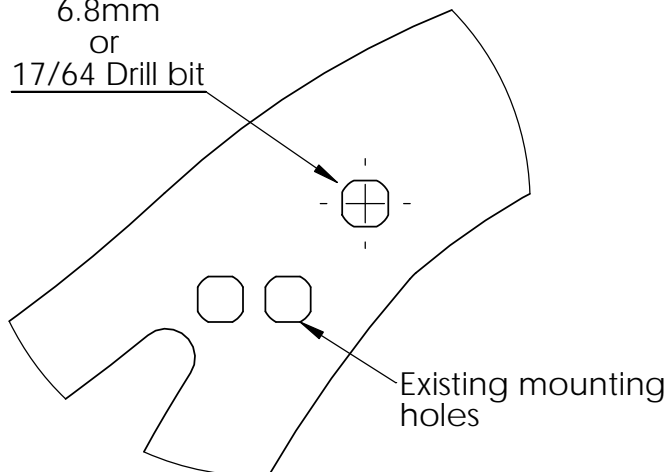

### RIGHT TEMPLATE

6.8mm  
or  
17/64 Drill bit

